

FIG. 1

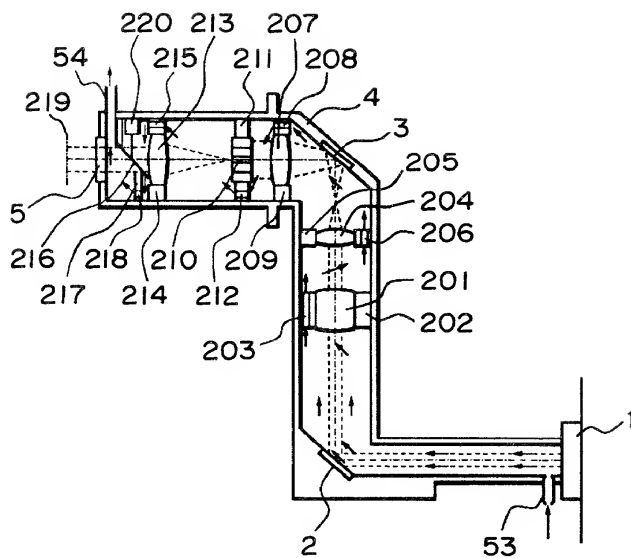


FIG. 2

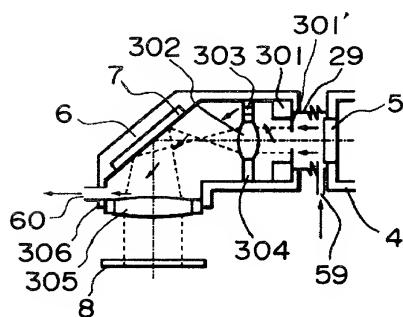


FIG. 3

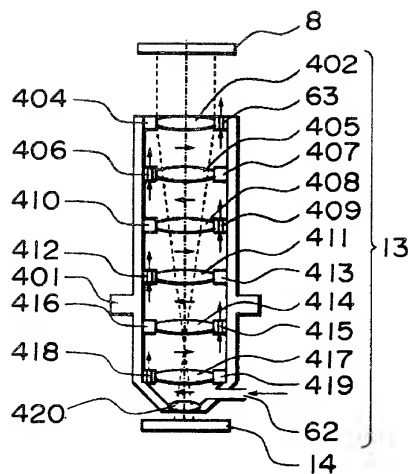


FIG. 4

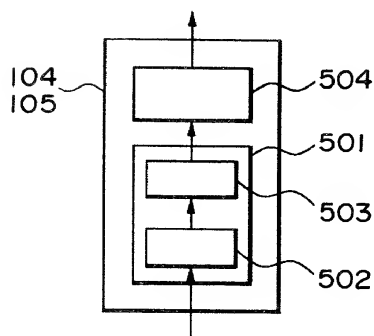


FIG. 5

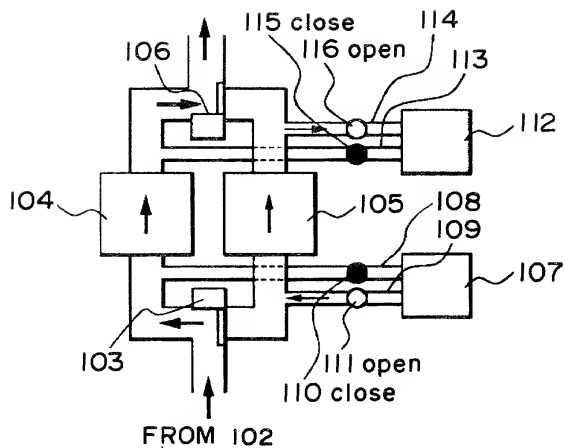


FIG. 6A

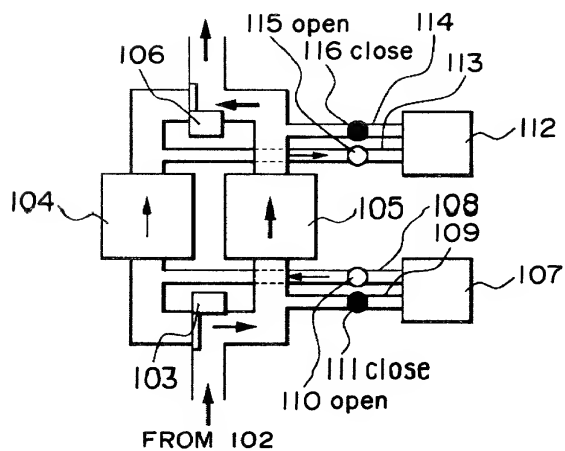


FIG. 6B

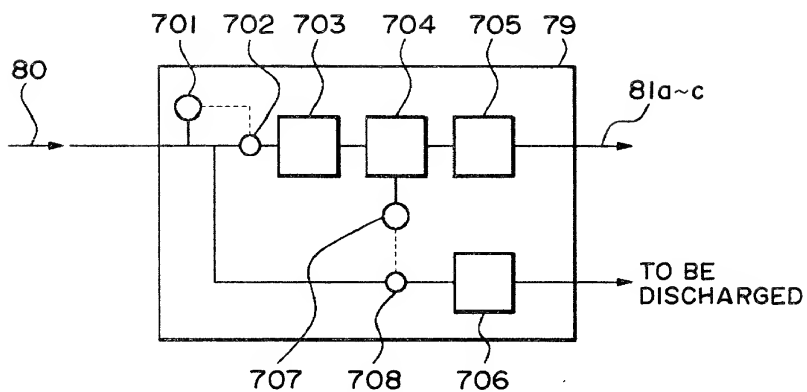


FIG. 7

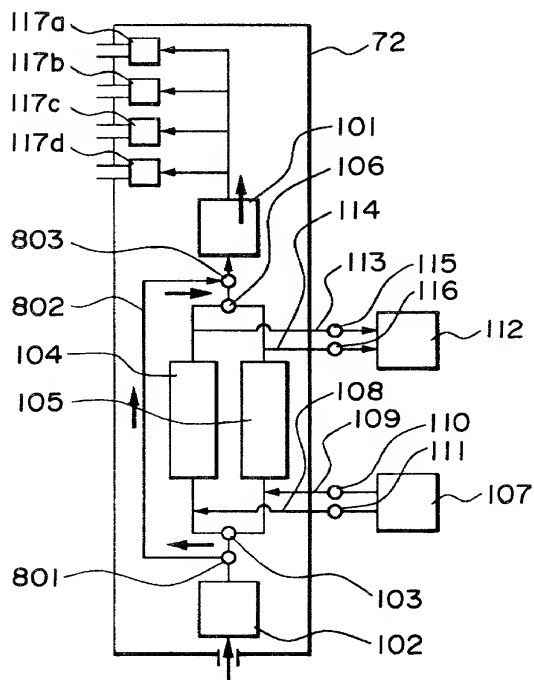


FIG. 8

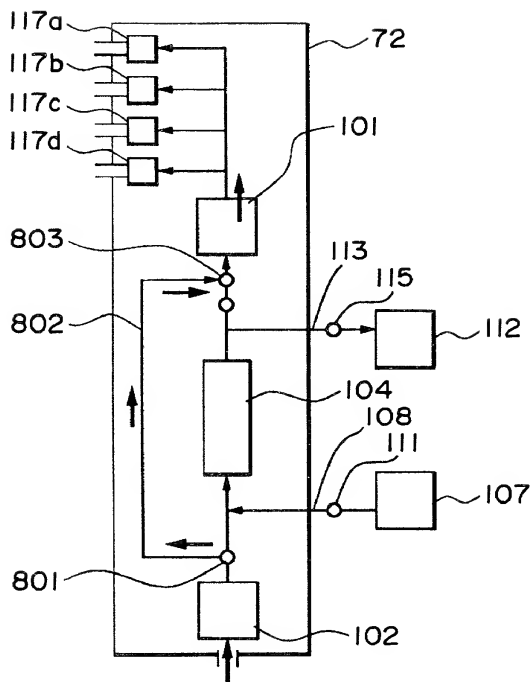


FIG. 9

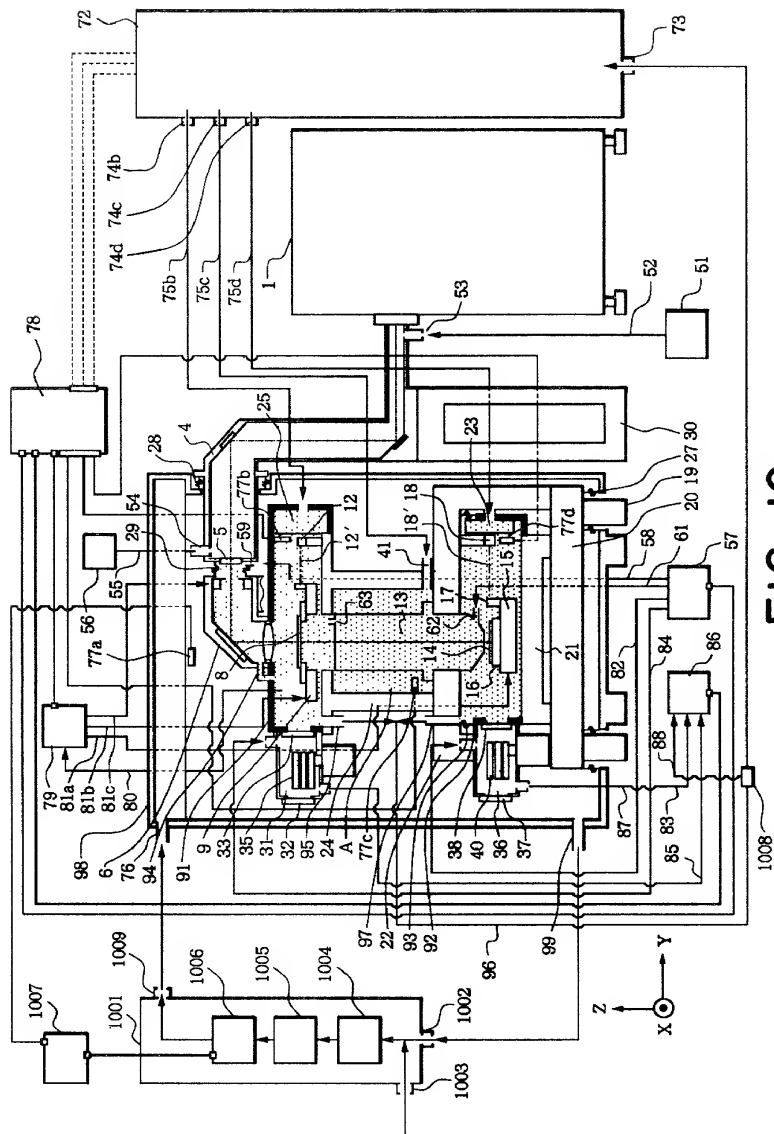


FIG. 10

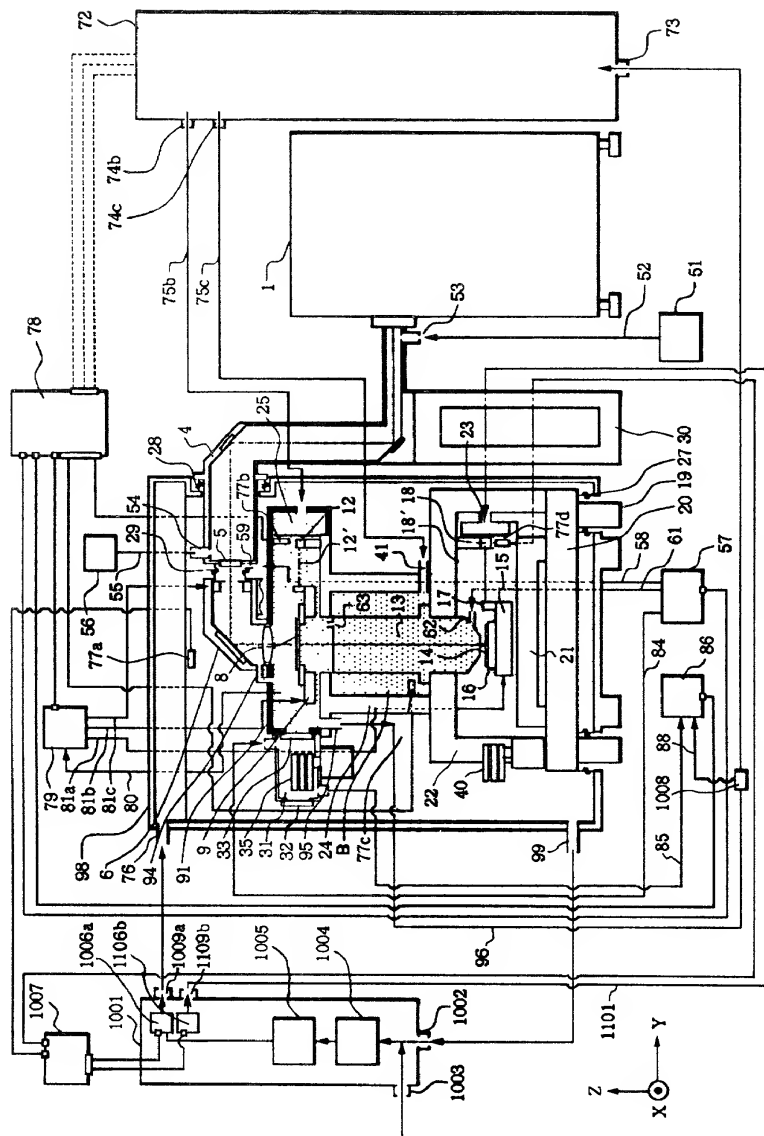


FIG. 11

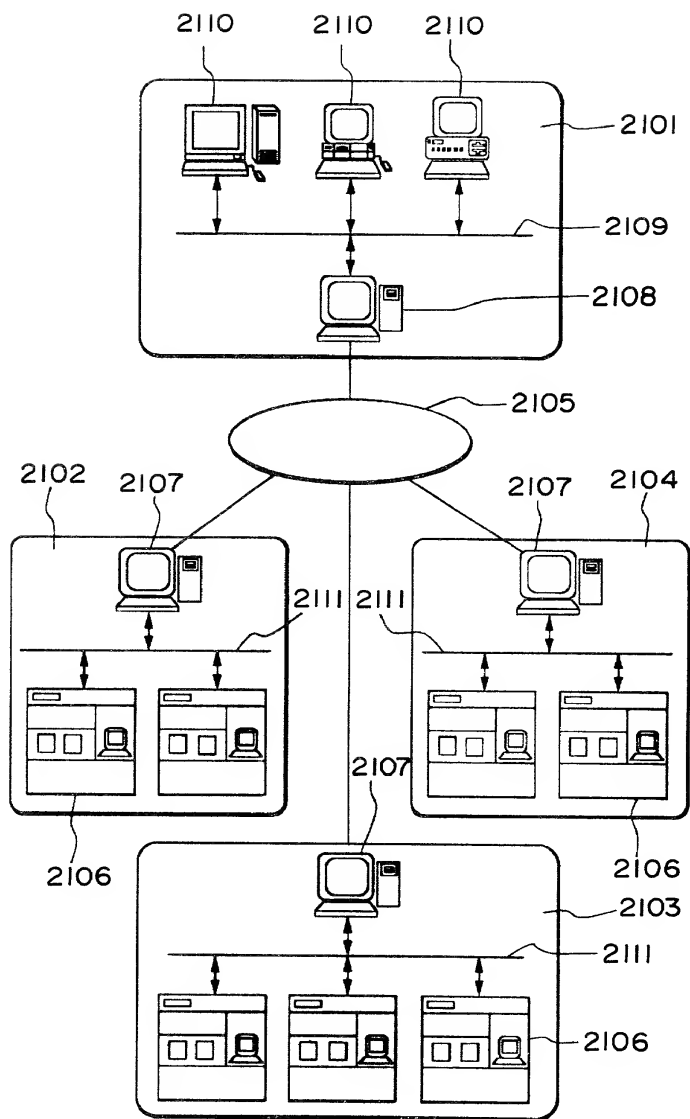


FIG. 12

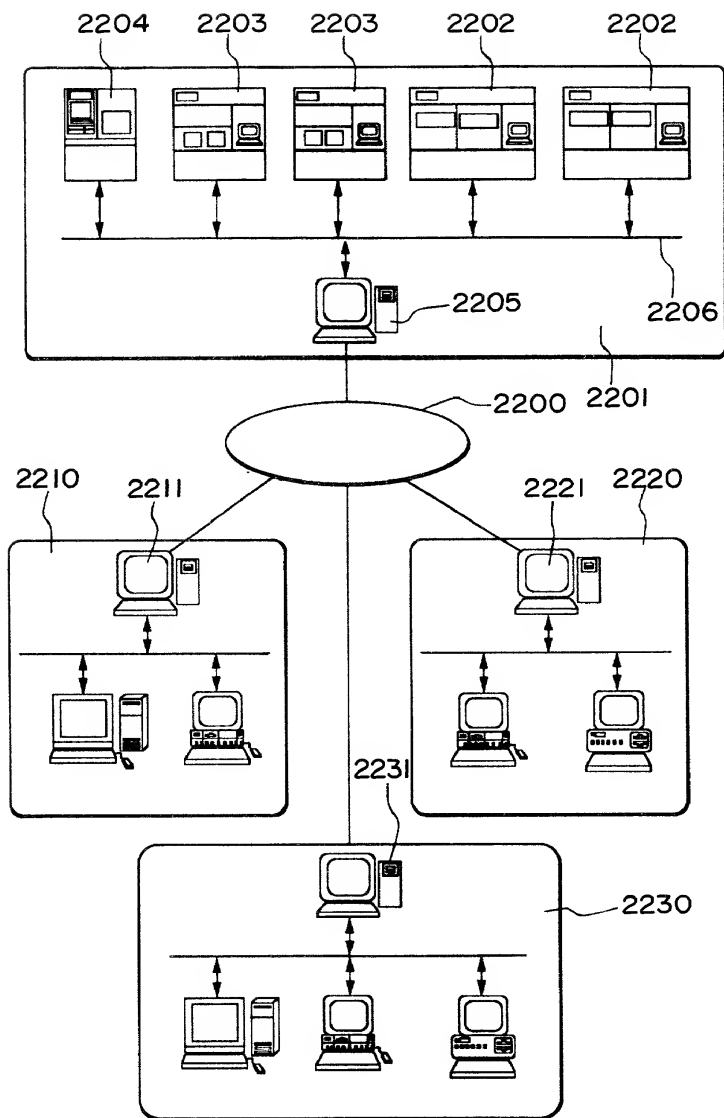


FIG. 13

Figure 1 shows the 'TROUBLE DB INPUT WINDOW' of the maintenance tool. The window contains the following fields and information:

- DATE:** 2000/3/15 (Label 404)
- MACHINE:** ***** (Label 401)
- FILE:** OPE. FAILURE (STARTING ERROR) (Label 403)
- S.N. S/N:** 465NS4580001 (Label 402)
- EMERGENCY:** D (Label 405)
- STATE:** LED FLICKERING AFTER POWERED (Label 406). The status bar shows a home icon, a down arrow, and two empty boxes.
- SOLUTION:** RESTART: PRESS RED BUTTON (Label 407). The status bar shows a home icon, a down arrow, and two empty boxes.
- PROGRESS:** TEMPORARY SOLUTION DONE (Label 408). The status bar shows a home icon, a down arrow, and two empty boxes.

At the bottom of the screen, there are five buttons/links:

- NEXT** (Label 410)
- RESET** (Label 411)
- LINK TO RESULT LIST DATABASE** (Label 412)
- SOFTWARE LIBRARY**
- OPERATION GUIDE**

FIG. 14

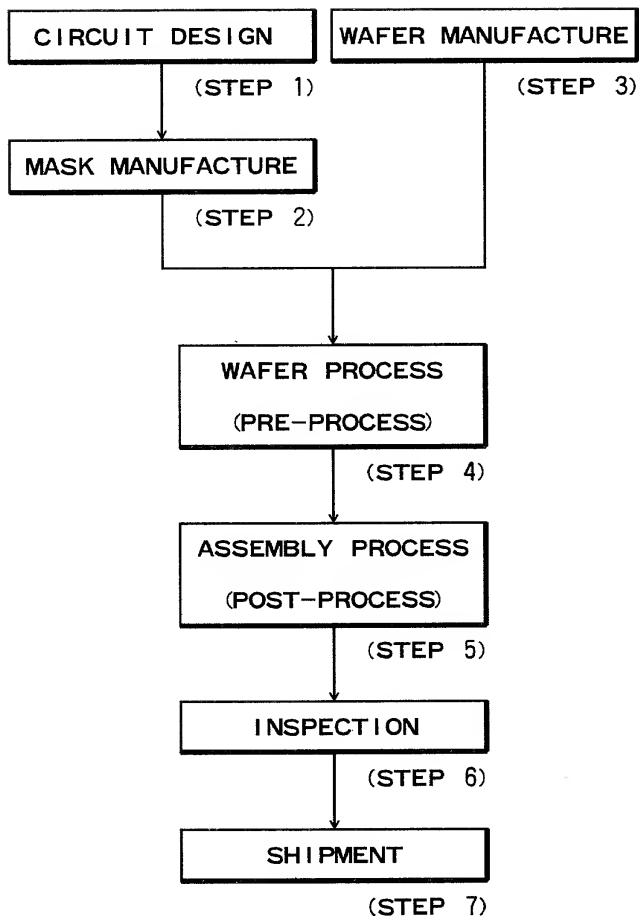


FIG. 15

FIG. 16

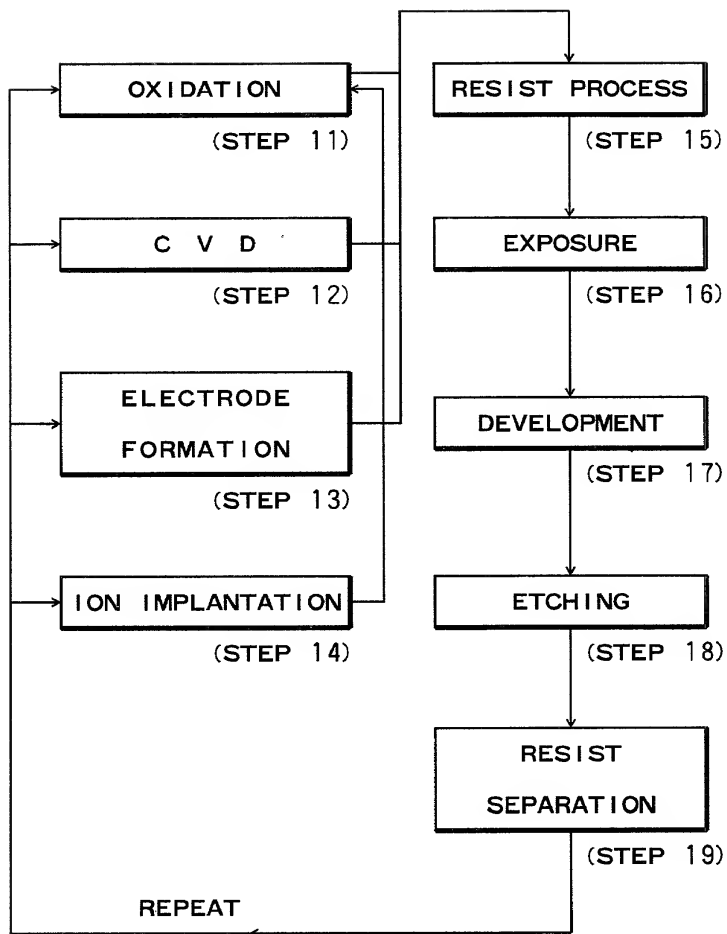


FIG. 16